


IN-18 NIXIE CLOCK CASE ASSEMBLY INSTRUCTION

Component list:

Component	Quantity, pcs
Plexiglas case sides	6
Screw 3x16 mm	6
Screw 3x10 mm	6
Spacers 3mm	12
Spacers 8mm	6

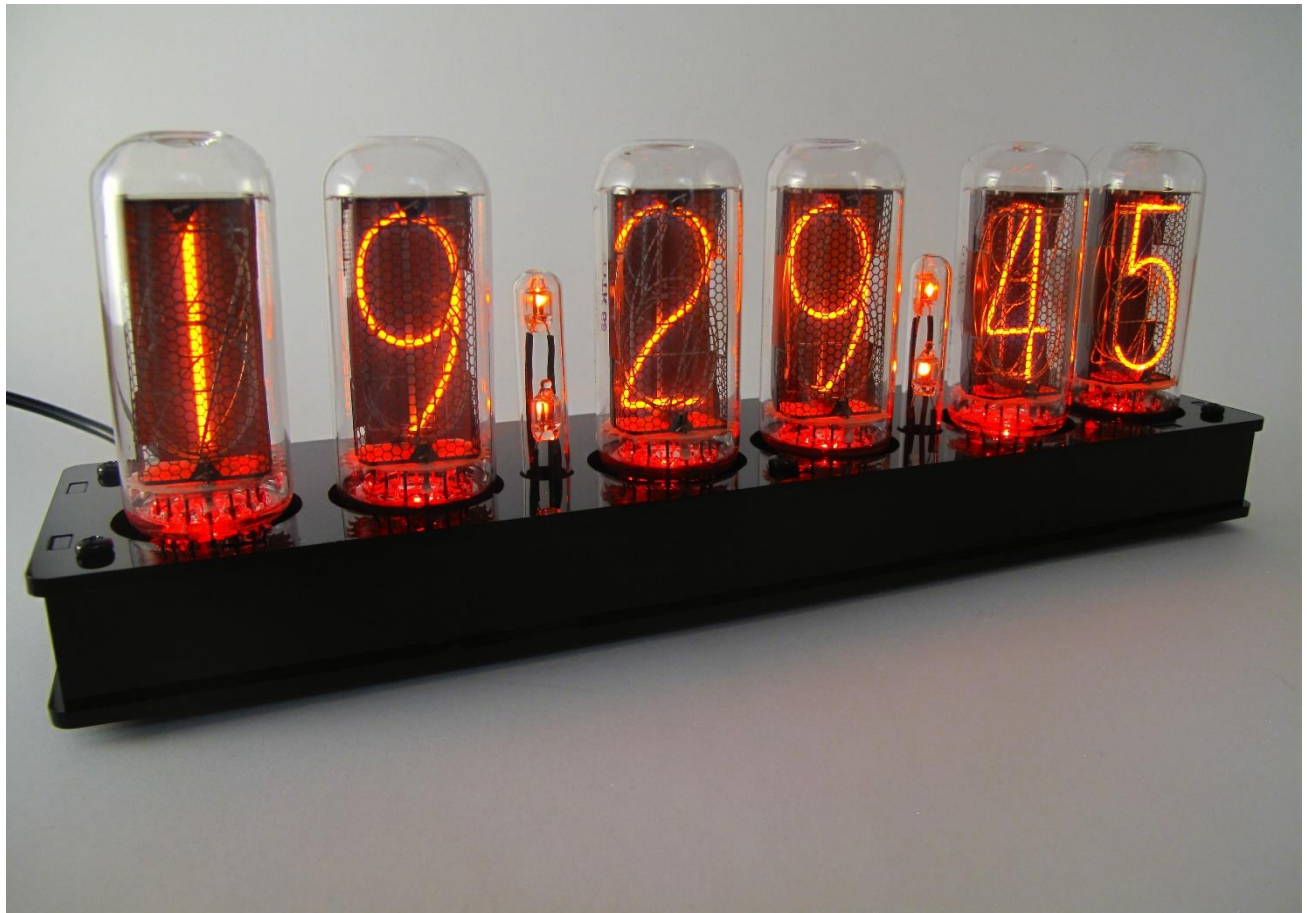


1. Take off a protective wrap from individual parts.




2. Insert six screws (3x16 mm) in plate holes and put a plastic 3mm spacers (2pcs) on each screw.



3. Put a clock printed circuit board on the screws and screw with 8mm spacers. Do not tighten the screws strongly because the plastic casing can crack.

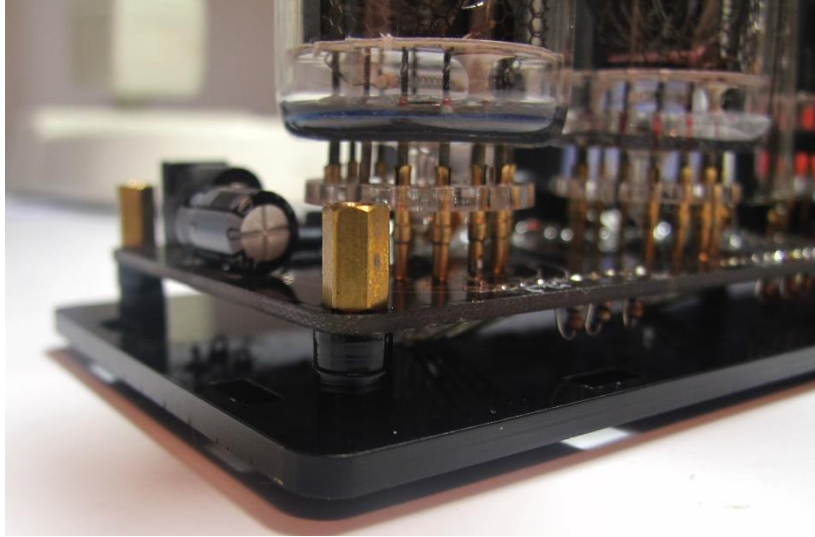

4. Fit plastic sides.

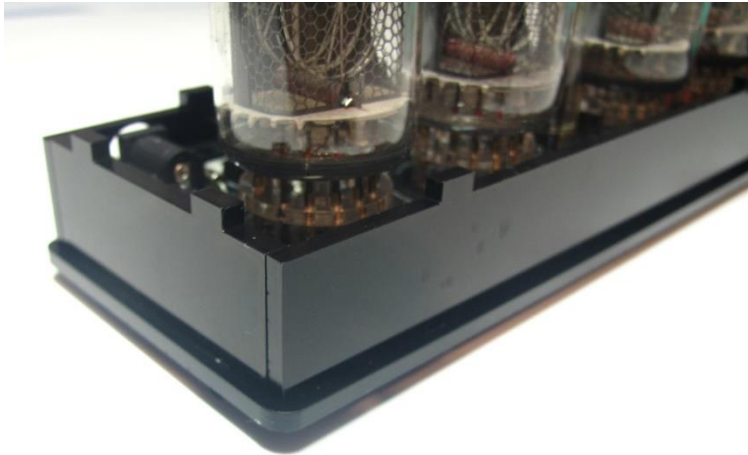

5. Cover the top lid and screw it by 10 mm screws. Do not tighten the screws strongly because the plastic lid can crack.

