


In-16 Nixie Clock Plexiglas case assembly instruction



| Component | Quantity, pcs |
|----------------------|---------------|
| Plexiglas case sides | 6 |
| Screw 3x6 mm | 4 |
| Screw 3x10 mm | 4 |
| Spacers 3 mm | 4 |
| Spacers 10 mm | 4 |

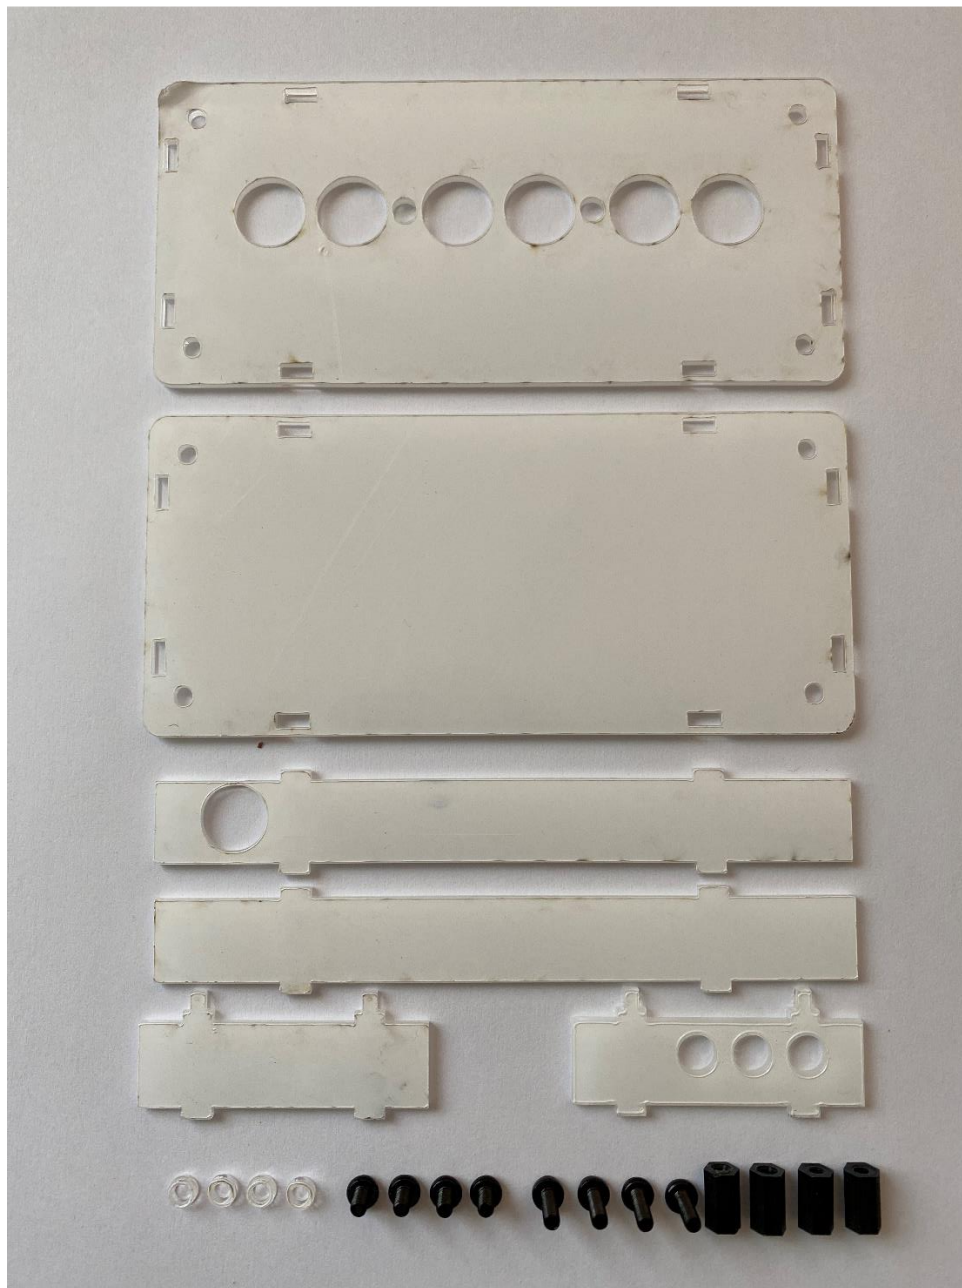


1. Take off a protective wrap from individual parts.



2. Insert top lid, four screws (3x10 mm) and 3mm spacers as indicated in the photos below.

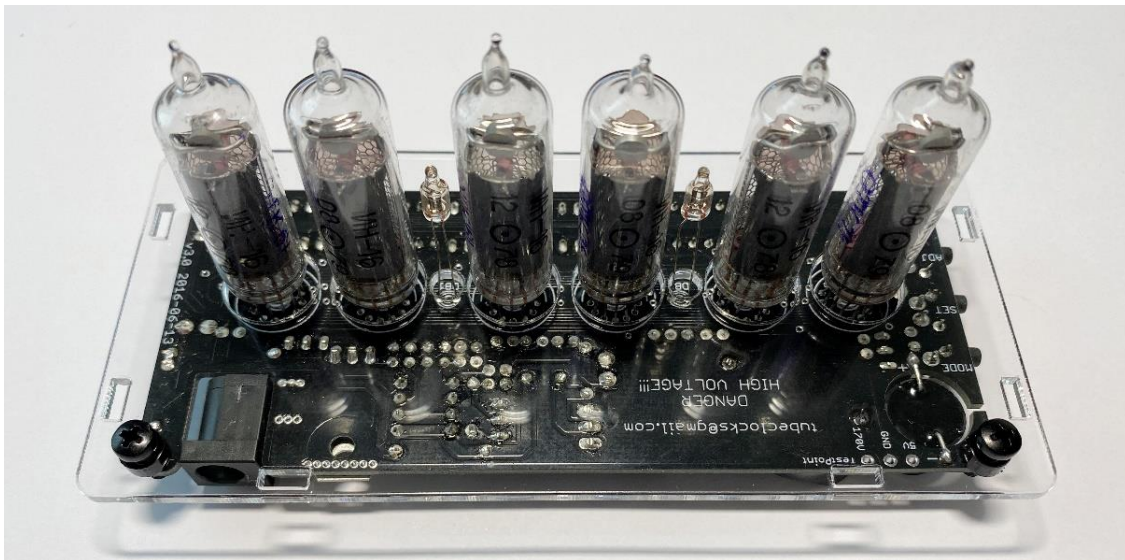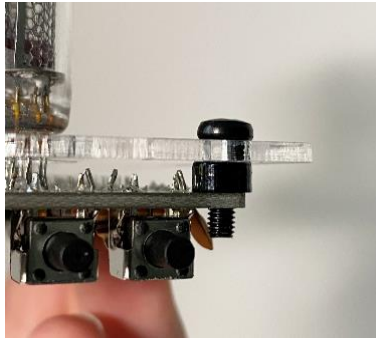


3. Screw spacers (10mm). Do not tighten the screws strongly because the plastic casing can crack.

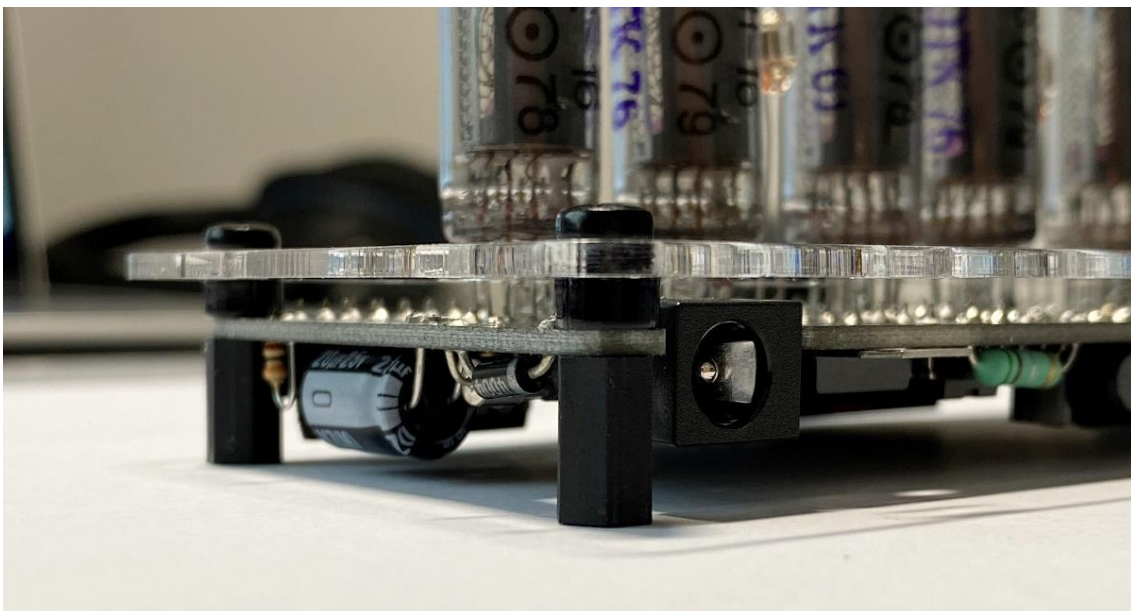



4. Fit plastic sides.

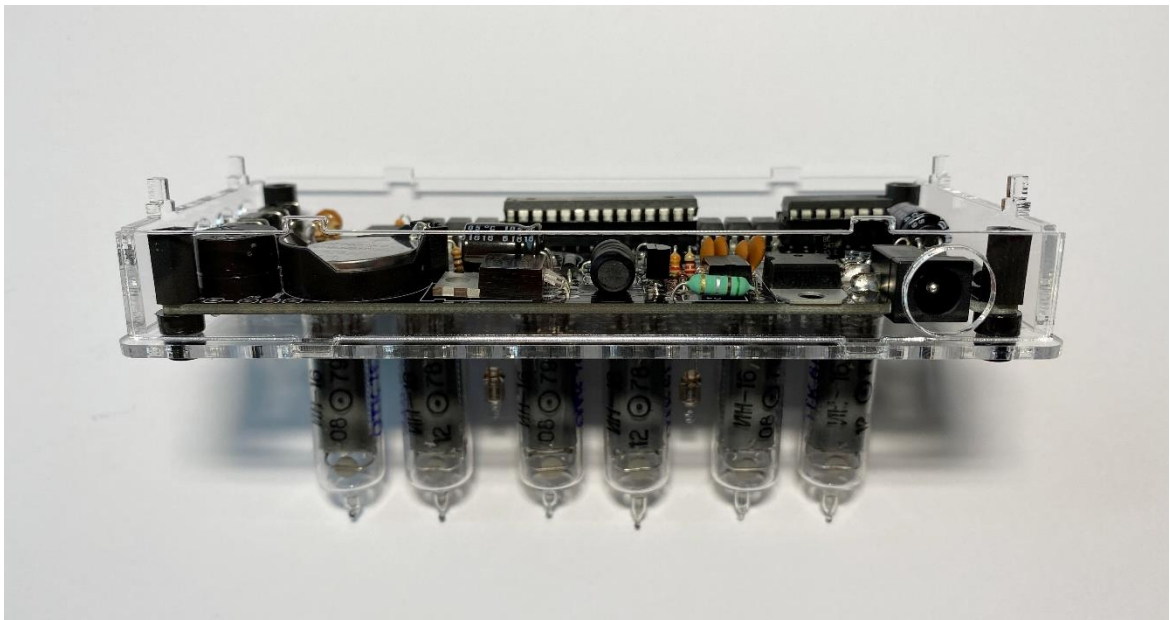

5. Cover the bottom lid and screw it by 6 mm screws. Do not tighten the screws strongly because the plastic lid can crack.

