


IN-14/IN-8-2/Z570M NIXIE CLOCK CASE ASSEMBLY INSTRUCTION

Component list:

Component	Quantity, pcs
Plexiglas case sides	6
Screw 3x10 mm	4
Screw 3x8 mm	4
Spacers 2mm	4
Spacers 8mm	4




1. Take off a protective wrap from individual parts.

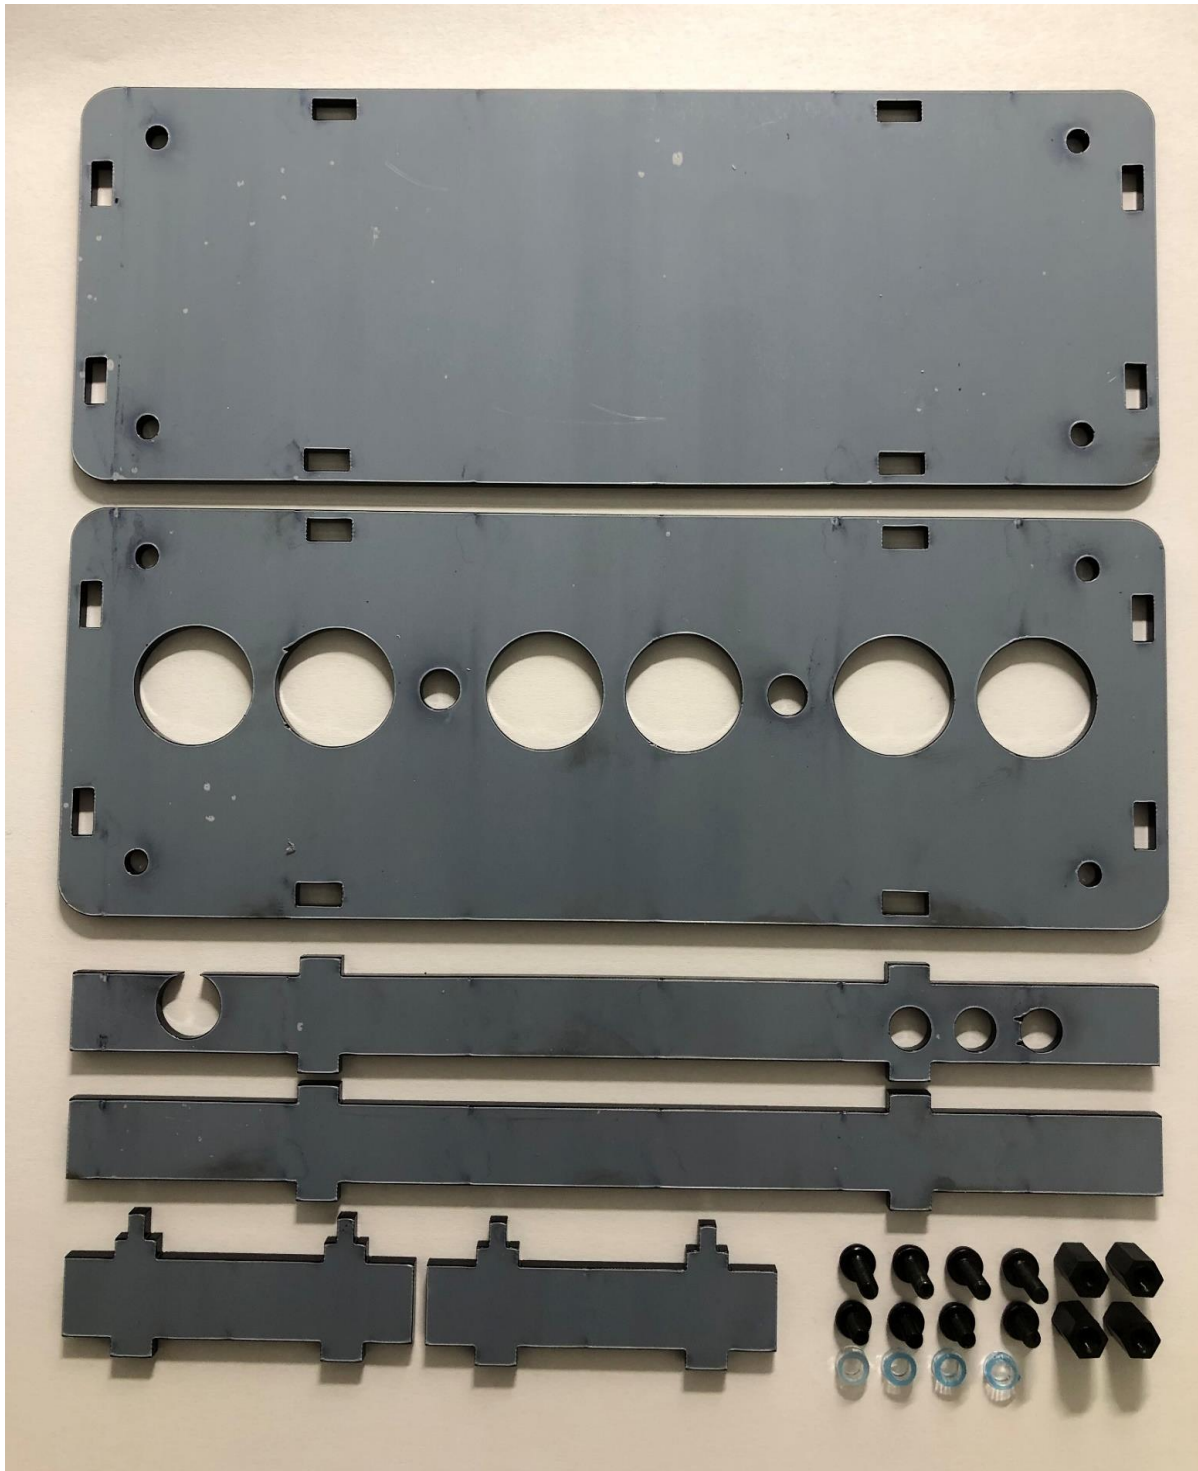

2. Insert four screws (3x10 mm) in plate holes.




3. Put a plastic spacer on each screw.

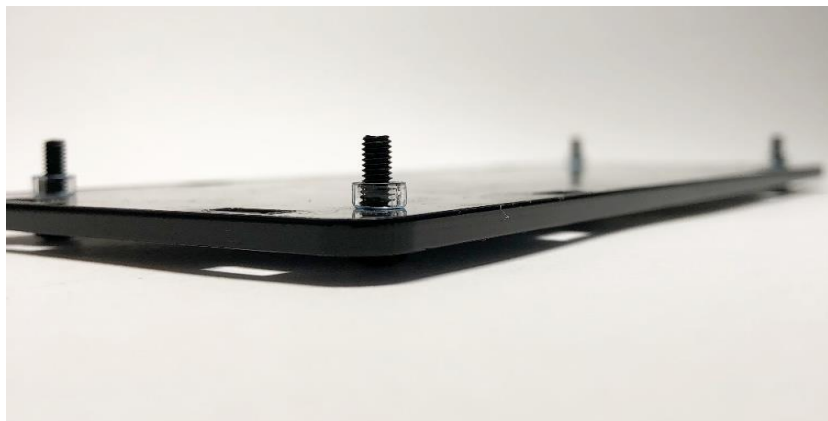

4. Put a clock printed circuit board on the screws.



5. Screw 8mm spacers. Do not tighten the screws strongly because the plastic casing can crack.

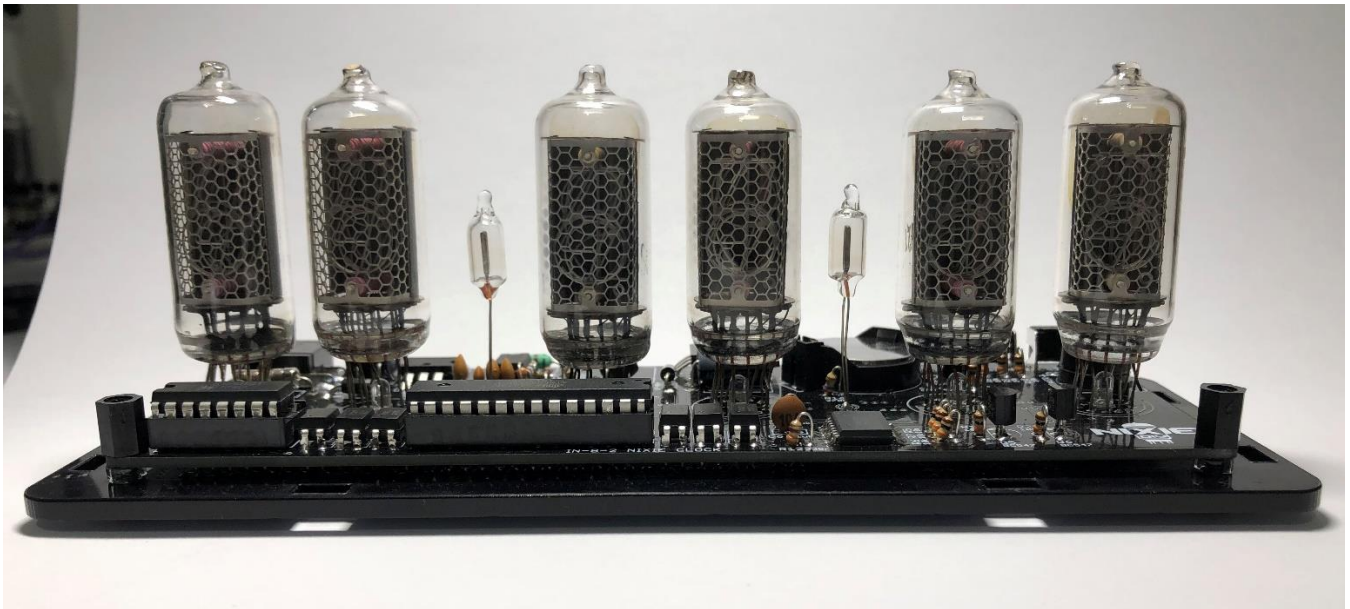

6. Fit plastic sides. Cover the top lid and screw it by 8 mm screws. Do not tighten the screws strongly because the plastic lid can crack.

