MODULAR NIXIE CLOCK CASE ASSEMBLY INSTRUCTION

Component list:

Component	Quantity, pcs
Plexiglas case sides	6
Screw 3x10 mm	8
Spacers 2mm	4
Spacers 10mm	4

1. Take off a protective wrap from individual parts.

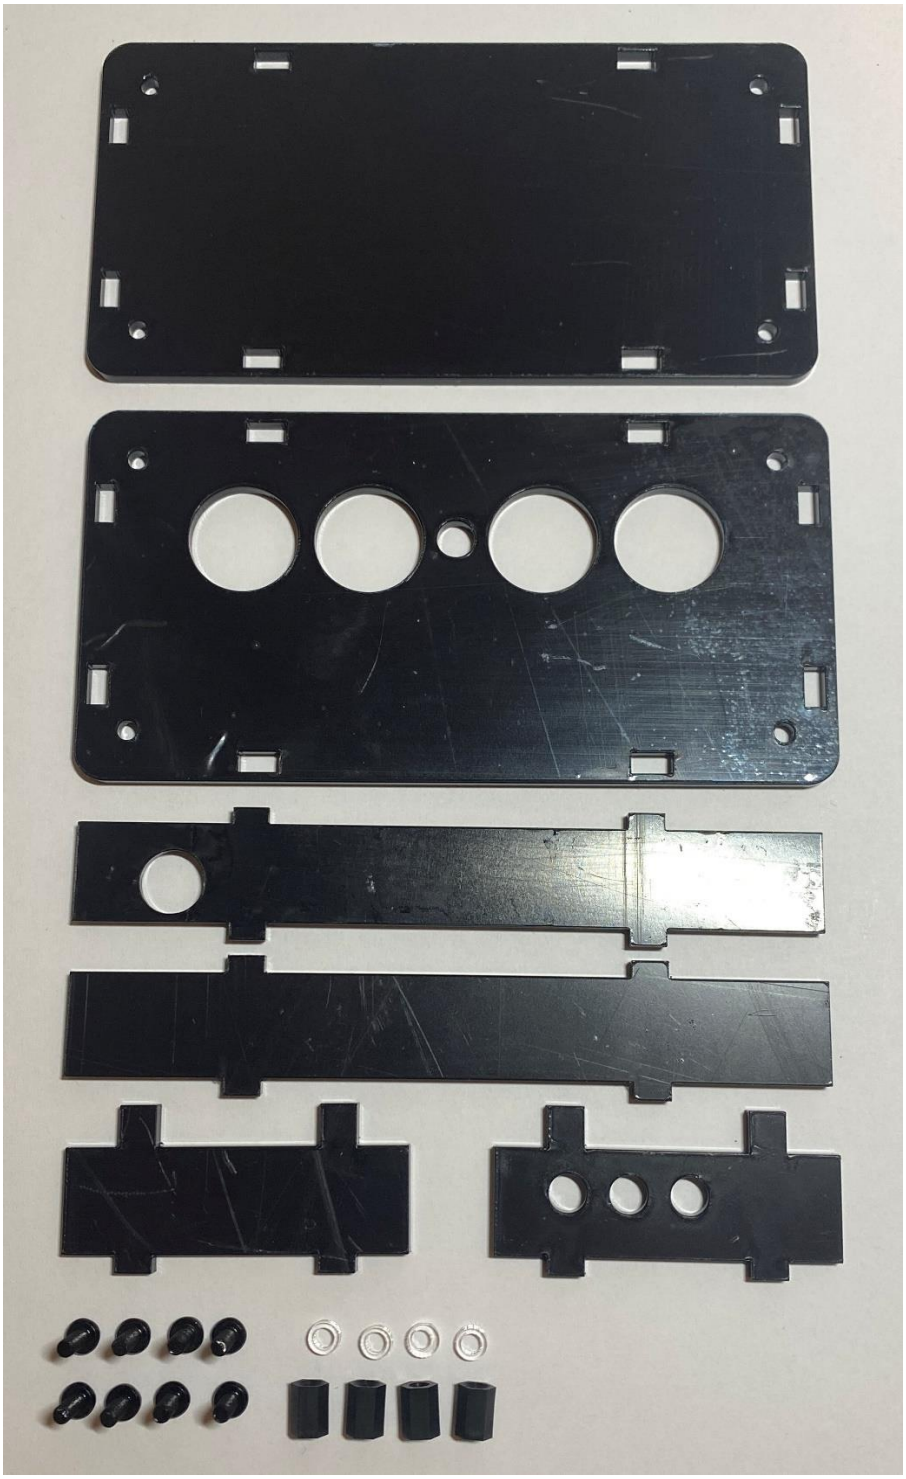

2. Insert four screws (3x10 mm) in plate holes and put a plastic spacer on each screw

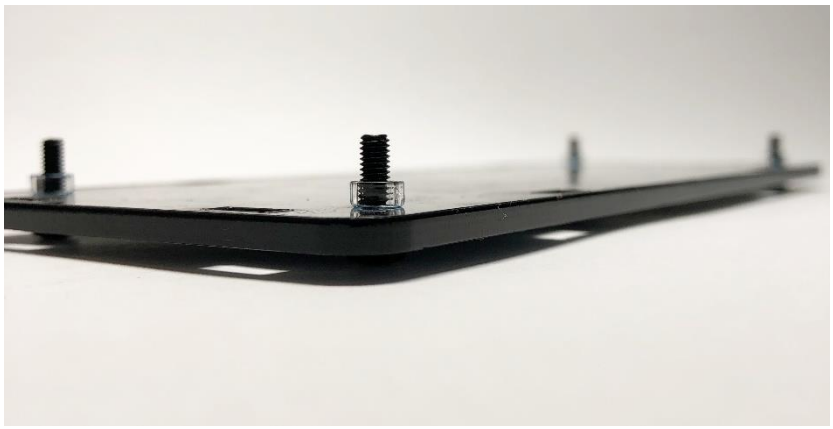

3. Put a clock printed circuit board on the screws and place right plastic side.

4. Screw 10mm spacers. Do not tighten the screws strongly because the plastic casing can crack.

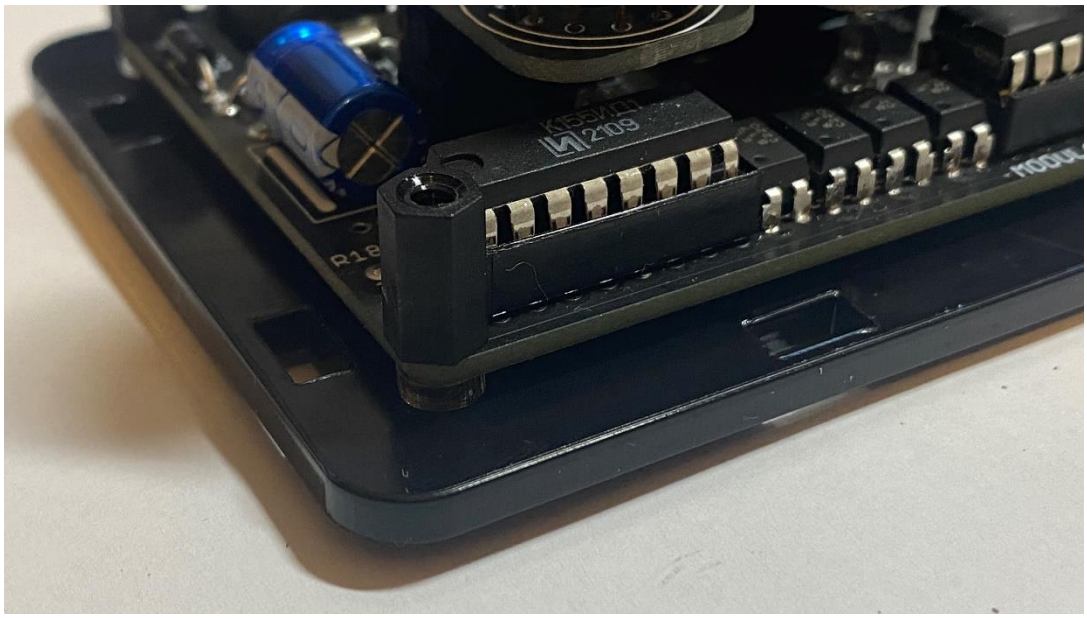

5. Fit plastic sides. Cover the top lid and screw it by 10 mm screws. Do not tighten the screws strongly because the plastic lid can crack.